

5860 Remote Fire Annunciator

The 5860, an optional 4x20 remote annunciator, is shown in Figure 1, it can be surface or flush-mounted.



Figure 1: Model 5860 Remote Annunciator

Compatibility

The 5860 is compatible with Honeywell's Silent Knight FACP's.

Note: For more information, see the FACP Installation manual.

Specifications

Parameter	Value
Operating Voltage:	24 VDC
Current	Standby: 25 mA
	Alarm: 50 mA
Operating Temperature:	0° to 49° C (32° to 120° F)

Annunciator Dimensions

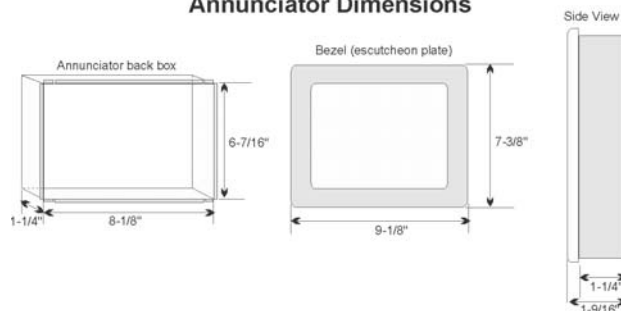


Figure 2: Annunciator Dimensions

Mounting

The annunciator can be flush or surface mounted.

Surface Mounting

The Model 5860TG (gray) and 5860TR (red) trim ring kits are available for use when surface mounting.


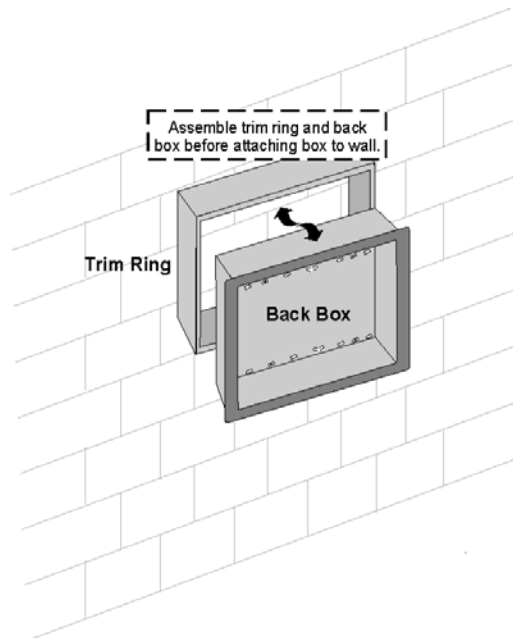


Figure 3: Surface Mounting

Flush Mounting

Follow these steps to flush mount the 5860:

Securing Back Box to Wall for Flush Mounting

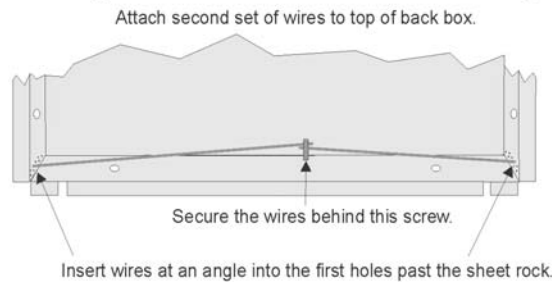

Flush Mounting with Electrical Box (Example)

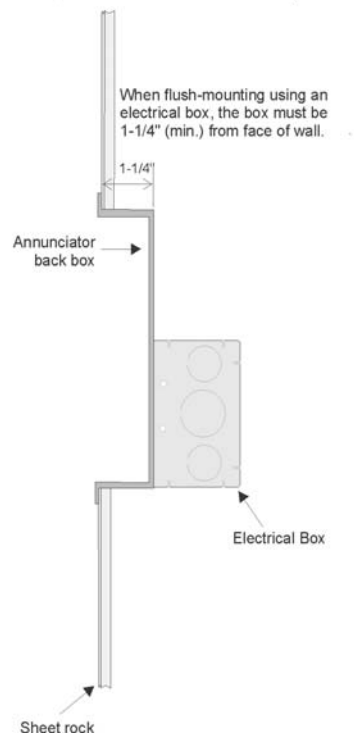


Figure 4: Flush Mounting

Wiring Connections

Wire the 5860 to the FACP as Shown in Figure 5.

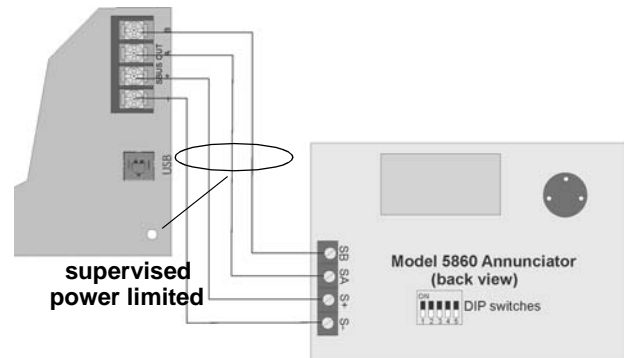


Figure 5: SBUS Connections

Installing the 5860

5860 installation involves the following steps:

1. Ensure power is turned off at the panel.
2. Mount the 5860 in the desired location.
3. Connect the 5860 to the panel (see Figure 5).
4. Use the DIP switches on the back of the 5860 to assign an ID number. (see FACP manual).
5. The new 5860 module must be added to the system through programming. JumpStart® will add the module automatically. Refer to the FACP manual for more information.